


[1] Complete kit MP2S-CAN-G8 Prg67




①	Module MP2S-CAN
②	P2P harness of CAN-Bus signals and power supply
IN1	- female plug (to dedicated connector in the car)
2	- power and CAN-Bus plugs [connect to module (1)]
③	Cable harness with G13 socket
	- GND connector
3	- outputs to socket G13 [connect to module (1)]
④	Cover of the G13 socket
⑤	Screw set for G13 socket

[2] Installation area

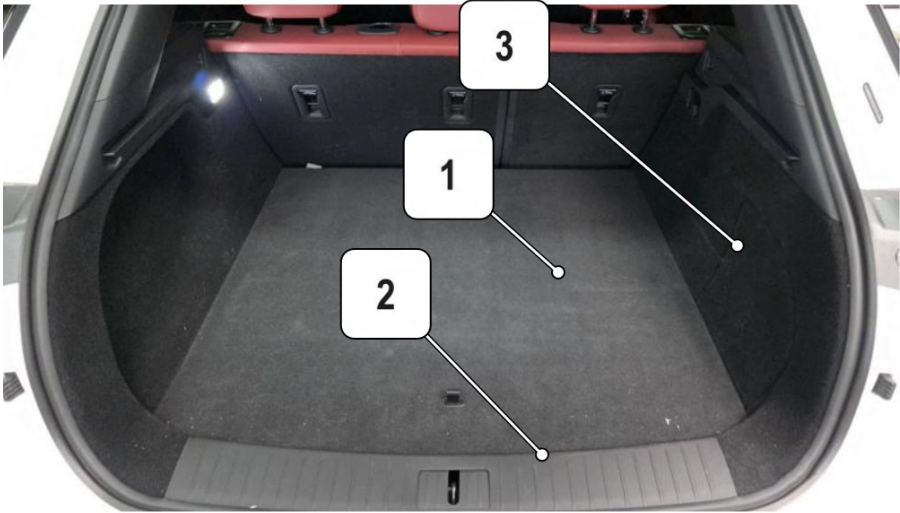


The entire installation is carried out within the vehicle's trunk space	
1	Remove the trunk floor carpet
2	Remove the trunk sill cover
3	Fold back the right side of the cover trunk

[3] Mounting locations for the car wiring harness components

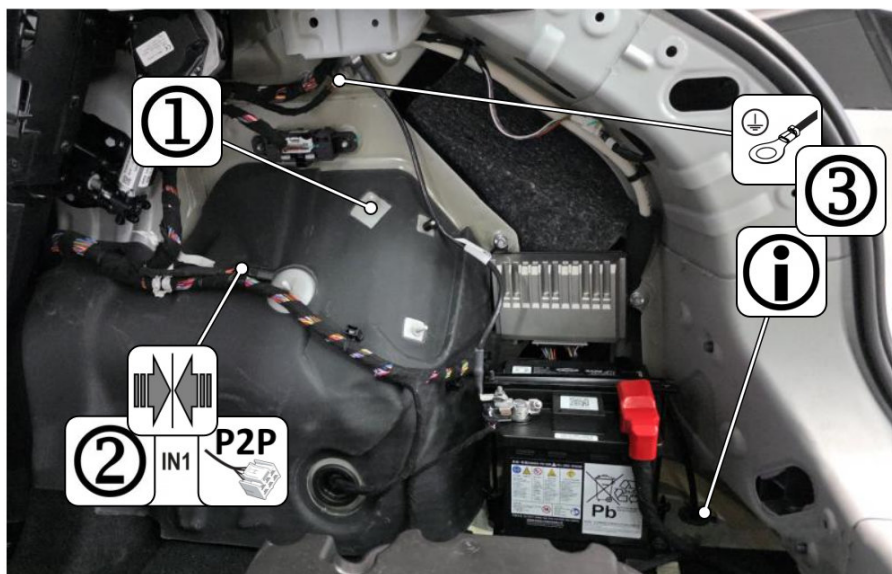

	To connect the P2P plug of the harness (2) to the factory P2P connector
①	Module (1) mounting location
	Location for connecting the GND connector from cable harness (3)
i	Location of the cable grommet for route of the cable harness to the trailer socket

[4] Description of pins in the trailer socket

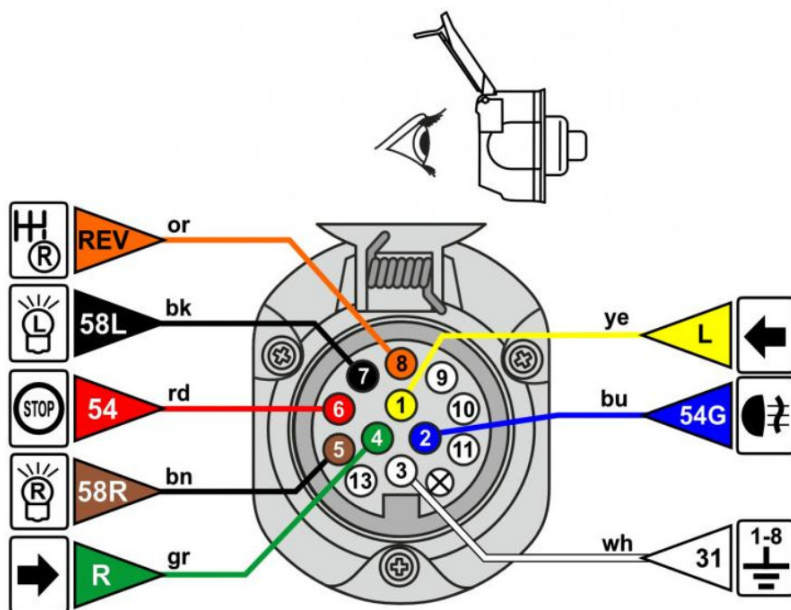

i	pin 1 (ye) yellow pin 2 (bu) blue pin 3 (wh) white pin 4 (gr) green pin 5 (bn) brown pin 6 (rd) red pin 7 (bk) black pin 8 (or) orange
---	---