

[1] Complete kit MP2S-CAN-G8 Prg67




①	Module MP2S-CAN
②	P2P harness of CAN-Bus signals and power supply
IN1	- female plug (to dedicated connector in the car)
2	- power and CAN-Bus plugs [connect to module (1)]
③	Cable harness with G13 socket
⊕	- GND connector
3	- outputs to socket G13 [connect to module (1)]
④	Cover of the G13 socket
⑤	Screw set for G13 socket

[2] Installation area




The entire installation is carried out within the vehicle's trunk space	
1	Remove the trunk floor carpet
2	Remove the cover on right side inside of the trunk

[4] Connection of the wiring harness to the vehicle's electrical system

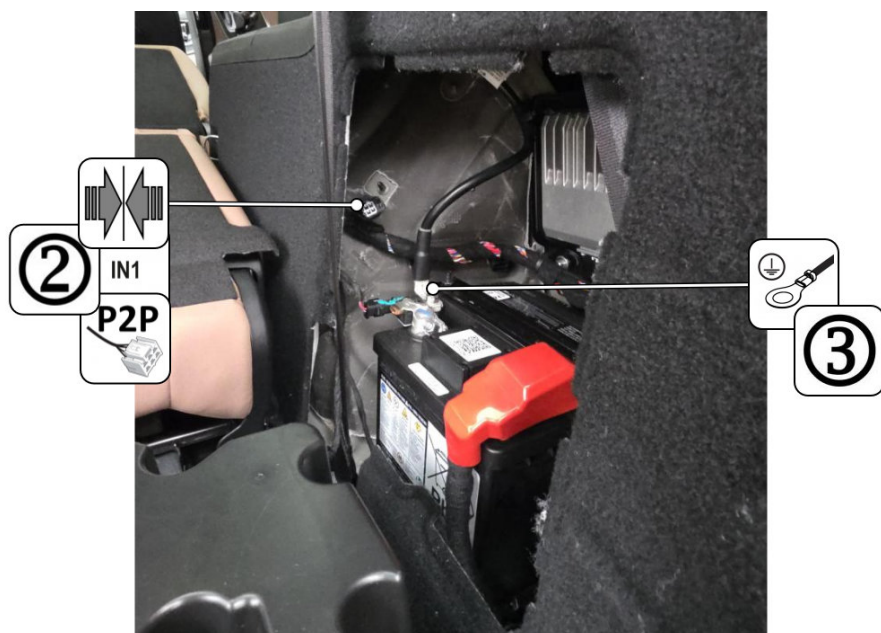


	To connect the P2P plug of the harness to the factory P2P connector
	Location for connecting the GND connector from the cable harness

[4] View on cable grommet

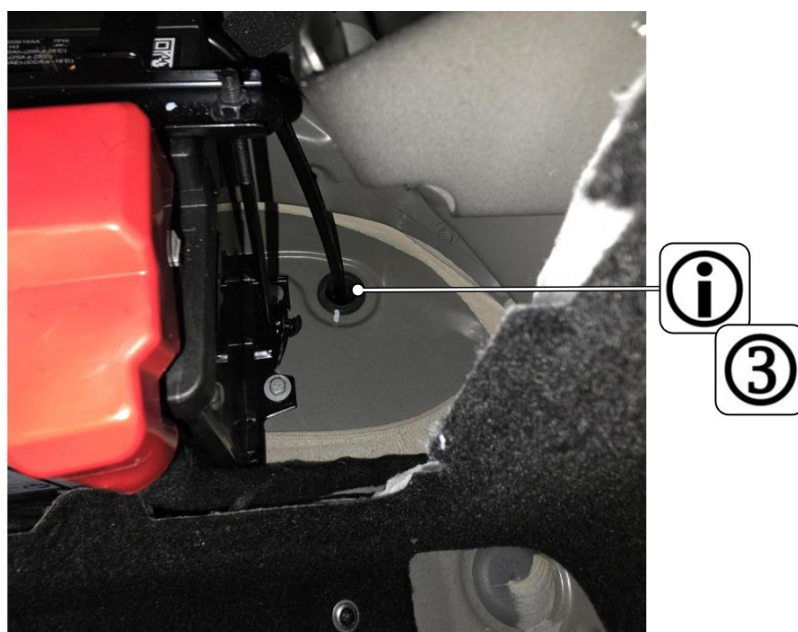

	Factory cable grommet for route of the cable harness to the trailer socket [on right side of the battery]
--	---

[5] Description of pins in the trailer socket

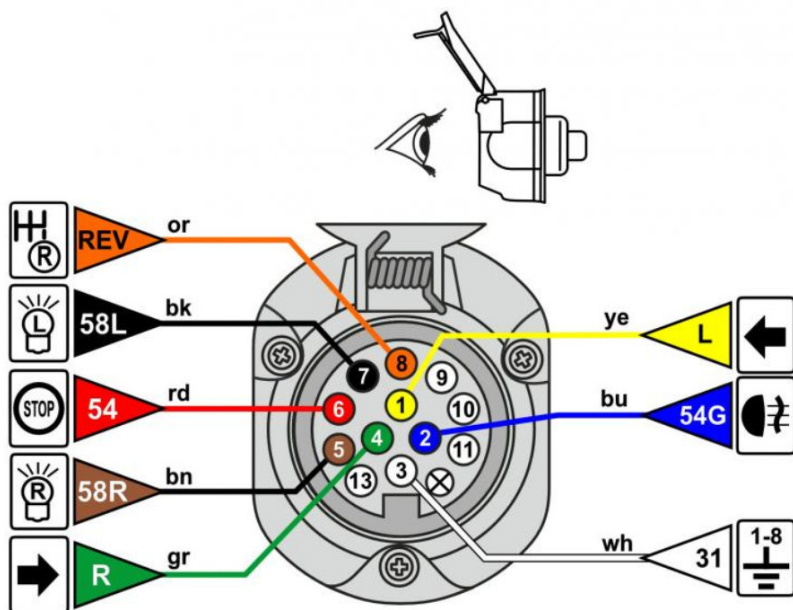

i	pin 1 (ye) yellow
	pin 2 (bu) blue
	pin 3 (wh) white
	pin 4 (gr) green
	pin 5 (bn) brown
	pin 6 (rd) red
	pin 7 (bk) black
	pin 8 (or) orange